


Exterior Window Perforated Material - Installation Instructions

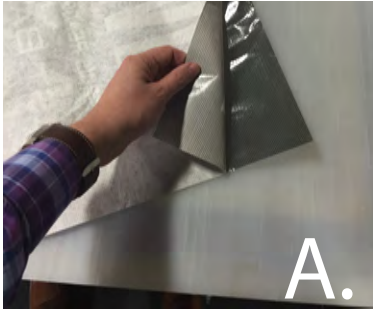

Surface Preparation


All glass surfaces **MUST** be clean and dry prior to applying the window graphic.

Graphic Installation

A. Remove the backing off of the top of the perforated material (about 3") and apply to the outside of the window.

B. With the top of the 3" material applied to the window, pull the backing off of the material about half way down the print. Keeping a downward tension.

C. With the backing off, pull the material away from the window.

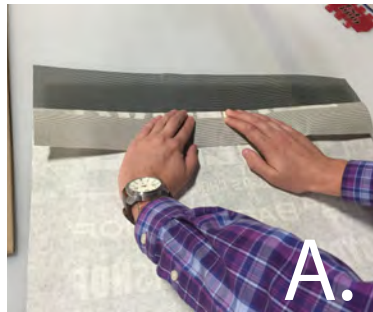

Press the material onto the window with your hands from

top to bottom until the material is totally flat and smooth. Working from the middle outwards. If any imperfections occur, pull the material back a bit and repeat this step.

Maintenance

Do **NOT** clean the graphic for at least 24 hours after application to allow for proper adhesion. The graphic itself can be cleaned using a mild soap and warm water mixture on a sponge. Be sure not to over saturate around the graphic to prevent edge lift.



Removal

Start at one edge and pull down the entire graphic using a smooth consistent force. Upon removal, it is normal for a shadow to appear. This is merely because the window under the graphic is cleaner than the window area around it, simply clean the area to remove the shadow.

*Temperature of the intended surface should be between 45 and 90 degrees Fahrenheit for best results

